


INSTALLATION INSTRUCTION FOR SEMI-FLUSH MOUNT


- 1-TURN OFF ELECTRICITY AT MAIN FUSE BOX BEFORE INSTALLATION.
- 2-THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 3-CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.

INSTALLATION:

STYLE#1



STYLE#2






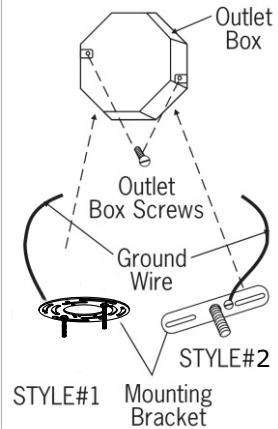


1. NOTE: REFER TO THE MOUNTING BRACKET STYLE THAT MATCHES THE BRACKET THAT IS INCLUDED WITH YOUR FIXTURE.

STYLE#1 (THREADED HOLES) ATTACH NIPPLE TO MOUNTING BRACKET AND ADJUST UNTIL IT WILL CLEAR FIXTURE WHEN ASSEMBLED. LOCK IN PLACE USING THE HEX NUT.

STYLE#2 (NIPPLE) ATTACH NIPPLE TO MOUNTING BRACKET AND ADJUST UNTIL IT WILL CLEAR FIXTURE WHEN ASSEMBLED. LOCK IN PLACE USING THE HEX NUT.

2. ATTACH GROUND WIRE ON MOUNTING BRACKET ASSEMBLY TO OUTLET BOX GROUND SCREW. MOUNT THE MOUNTING BRACKET TO OUTLET BOX USING OUTLET BOX SCREWS. MAKE SURE THE STUDS OR NIPPLE ON THE MOUNTING BRACKET ARE FACING OUT FROM THE OUTLET BOX.

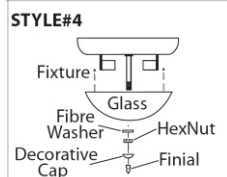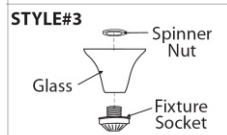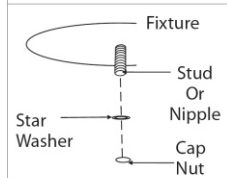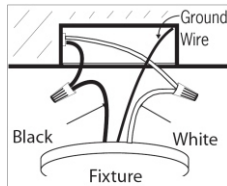

4. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX. CONNECT BLACK WIRE FROM FIXTURE TO BLACK WIRE IN OUTLET BOX AND CONNECT THE WHITE WIRE FROM FIXTURE TO WHITE WIRE IN OUTLET BOX.

5. TUCK ELECTRICAL WIRES INTO OUTLET BOX AND POSITION FIXTURE OVER STUDS OR NIPPLE ON MOUNTING BRACKET ASSEMBLY. SECURE FIXTURE IN PLACE WITH STAR WASHER(S) AND CAP NUT(S). **NOTE:** IF REQUIRED, ASSEMBLE BODY AND SPREAD THE ARMS OF THE FIXTURE OUT EVENLY.

6. **NOTE:** REFER TO THE STYLE OF ASSEMBLY THAT MATCHES THE STYLE OF YOUR FIXTURE.
STYLE#1- PLACE THE DECORATIVE RING OVER THE GLASS SHADE. ATTACK THE GLASS SHADE TO THE FIXTURE SOCKET USING THE THUMB SCREWS (TIGHTEN WITH FINGERS ONLY). INSTALL PROPER BULB TYPE AND WATTAGE (NOT INCLUDED).
STYLE#2- SQUEEZE THE CLIPS TOGETHER AROUND THE SOCKET. SLIDE THE GLASS OVER THE CLIPS, THEN PUSH THE GLASS UP SNUG TO THE FIXTURE HEAD.
STYLE#3- REMOVE SPINNER NUT FROM SOCKET. POSITION GLASS ON THE FIXTURE AND SECURE WITH SPINNER NUT.
STYLE#4- SECURE THE GLASS IN PLACE USING THE FIBRE WASHER, HEX NUT, DECORATIVE CAP AND FINIAL.

INSTALLATION

1. SPREAD THE ARMS AND THE IRON FRAME EVENLY.
2. ATTACH THE STEM ONTO THE FIXTURE.
3. PUT THE RUBBER WASHER ONTO THE STEM. THEN PUT THE GLASS AND FIBER WASHER ONTO FIXTURE AND TIGHTEN BY HEX NUT 1.
4. INSTALL THE IRON FRAME TO GLASS AND TIGHTEN BY HEX NUT 2.
5. SECURE THE ARMS TO THE IRON FRAME VIA THE SCREWS.
6. PUT THE DECORATIVE CAP ONTO THE IRON FRAME AND TIGHTEN BY THE FINIAL.

7000SF

