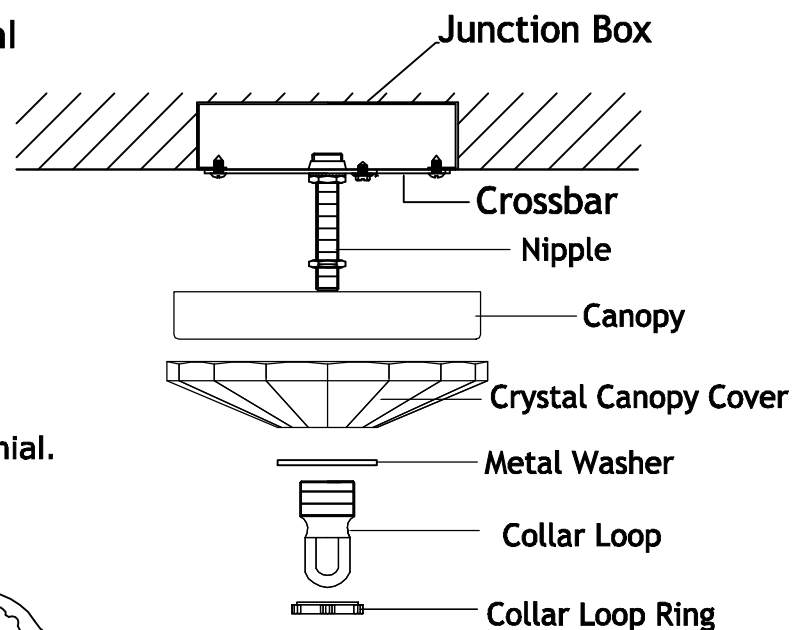
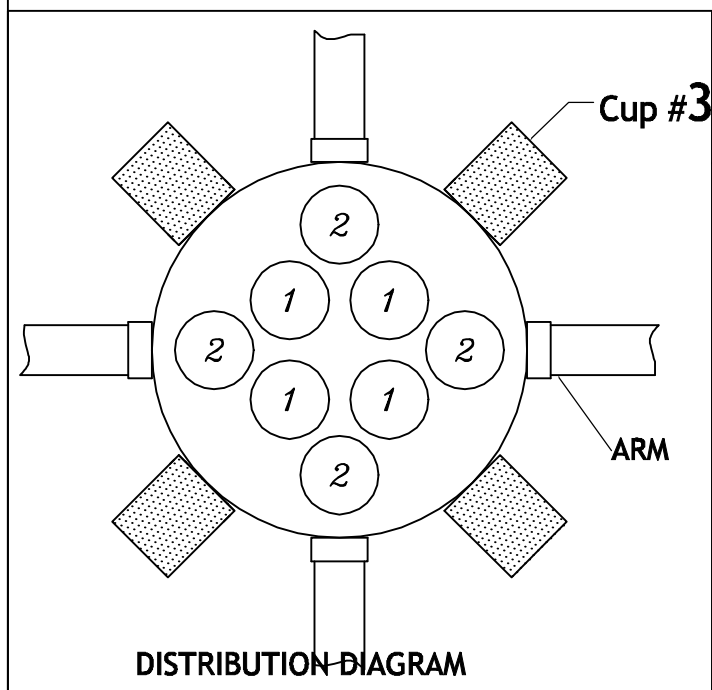
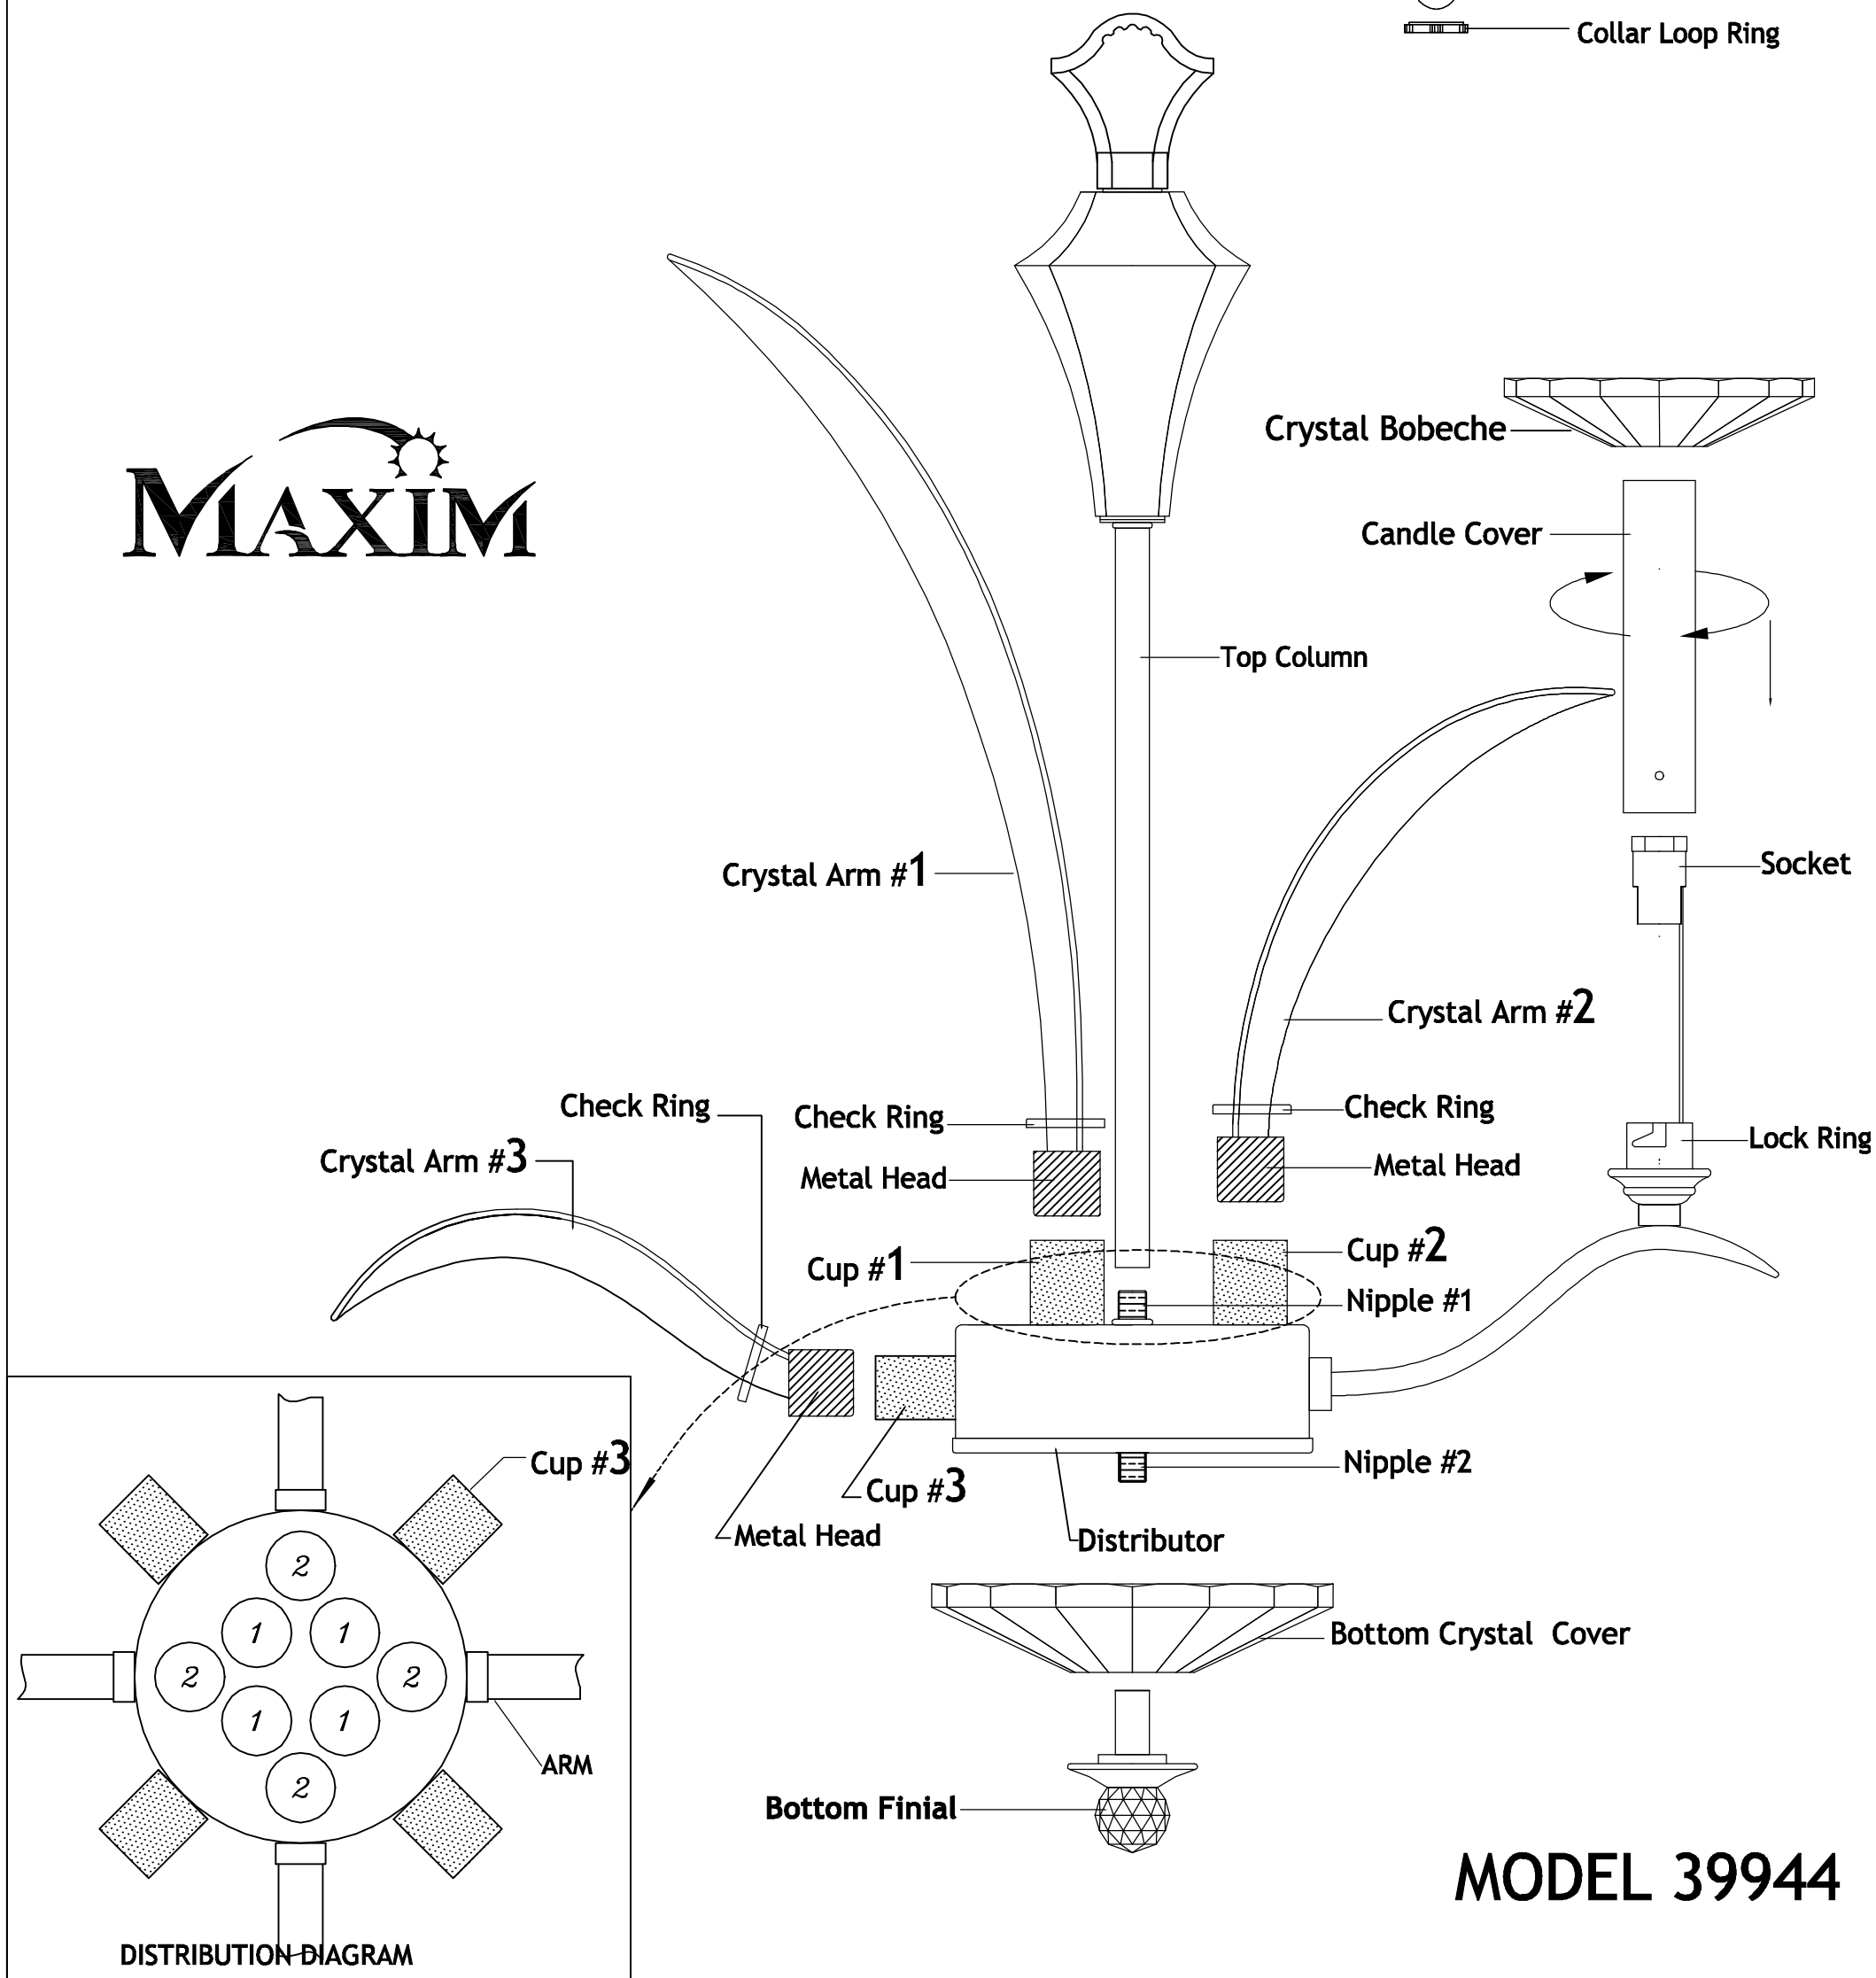


# PARADISE

## INSTALLATION INSTRUCTION

!! Please use the gloves enclosed before handling any parts or crystal

1. Screw the Top Column to Nipple #1. Hang the fixture. Please refer to the Installation Instruction enclosed for installation and wiring.
2. Insert Crystal arm#1 into Cup#1. Remove label prior to installing crystal. The magnet in the cup will hold the arm in place. Snap Check Ring onto cup.
3. Repeat Step 2 for Crystal #2 and #3, Please refer to the DISTRIBUTION DIAGRAM for positioning.
4. Insert the Candle Covers over the Sockets with the indented point down and twist lock onto Lock Ring. Install the Crystal Bobeches over the Candle Covers.
5. Install the Bottom Crystal Cover over Nipple #2 and secure with the Bottom Finial.

**MODEL 39944**

For missing parts or installation questions call 1-800-486-2946

<b>COMPONENT LIST</b>			
<b>No.</b>	<b>Component</b>	<b>Q'ty</b>	<b>Replacement Part No.</b>
01	Canopy Kit		
	Canopy	1Pc	
	Crystal Canopy Cover	1Pc	CRYCOV023
	Collar Loop	1Pc	
	Chain	1Pc	
	Nipple	1Pc	
	Hex nut	2Pcs	
	Metal Washer	1Pc	
	Washer	1Pc	
	Crossbar	1Pc	
	Ground Screw	1Pc	
	Wire Nut	3Pcs	
	Mounting Screws	2Pcs	
02	Crystal Bobeche	4Pcs	CRYCOV027
03	Candle Cover	4Pcs	
04	Crystal Arm #1	4Pcs	CRYARM001
05	Crystal Arm #2	4Pcs	CRYARM002
06	Crystal Arm #3	4Pcs	CRYARM003
07	Bottom Crystal Cover	1Pc	CRYCOV029
08	Bottom Finial	1Pc	FINCRY020
09	Top Column	1Pc	
10	Glove	1pair	